




Nest Thermostat

1. Create a Nest account.


Create an account at <https://home.nest.com> (browser) and follow the guided instructions to set up the thermostat. Or you may download the Nest app and do the same. Have the account/password ready.

2. Link Nest thermostat to WWAlarm system.


On WWAlarm app, navigate to "Device Management -> OPU/Shuttle settings -> Manage Integration".

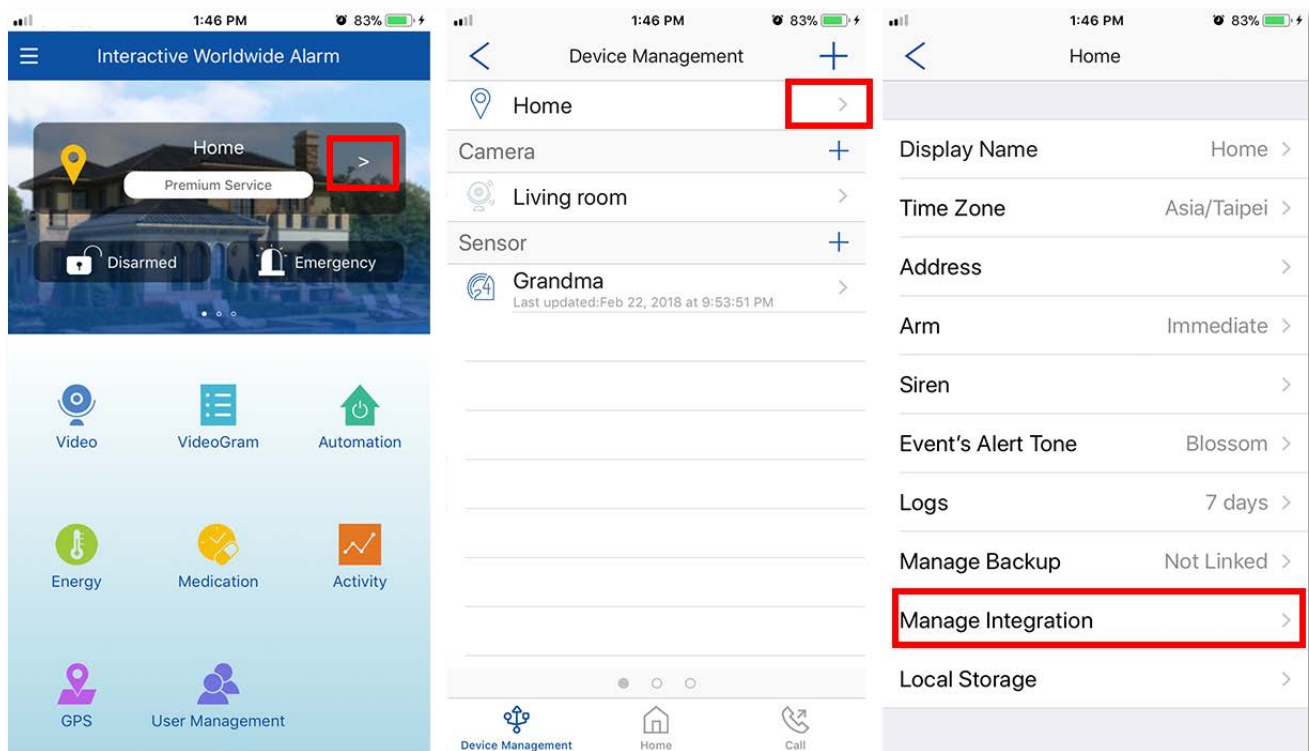

On Manage Integration, tap on ">" on the Account row for NEST. Enter the Nest account and password to sign in.

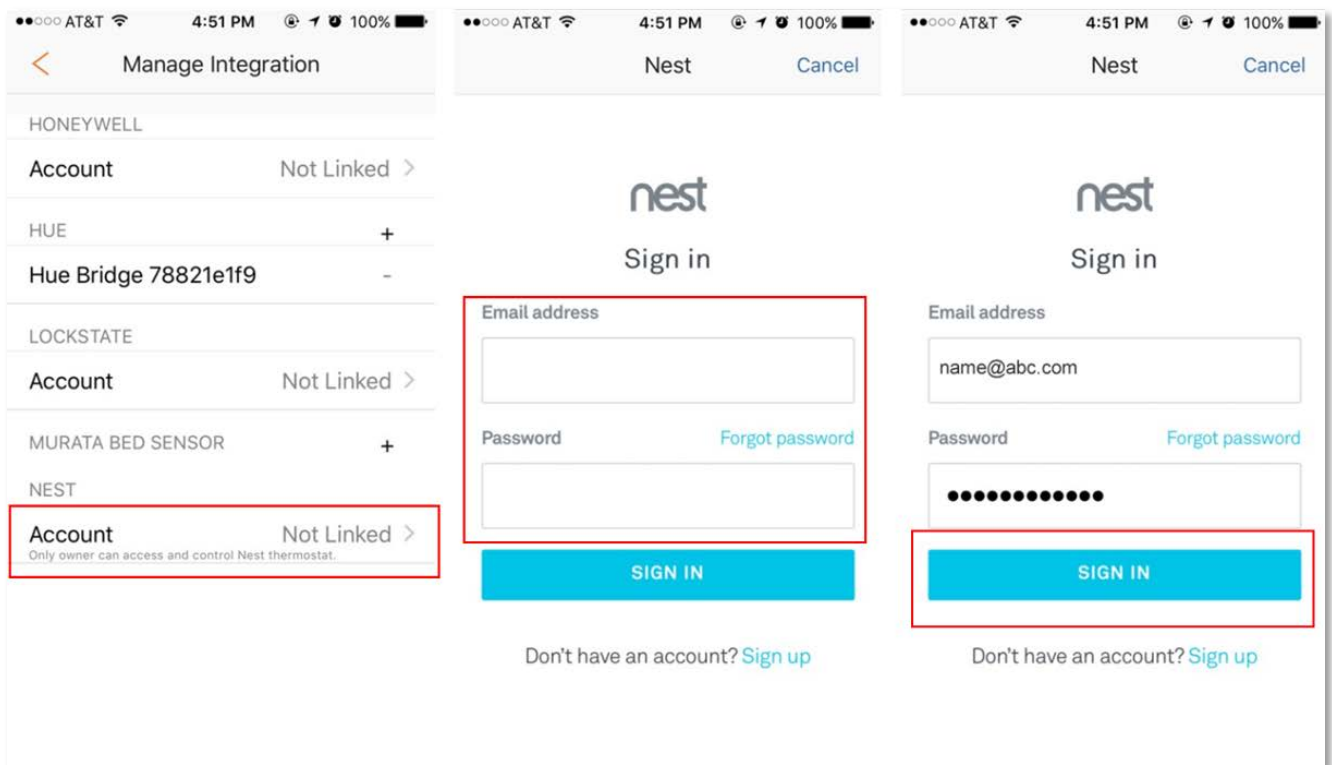


Accept Nest agreement. Nest account is now linked with WWAlarm.

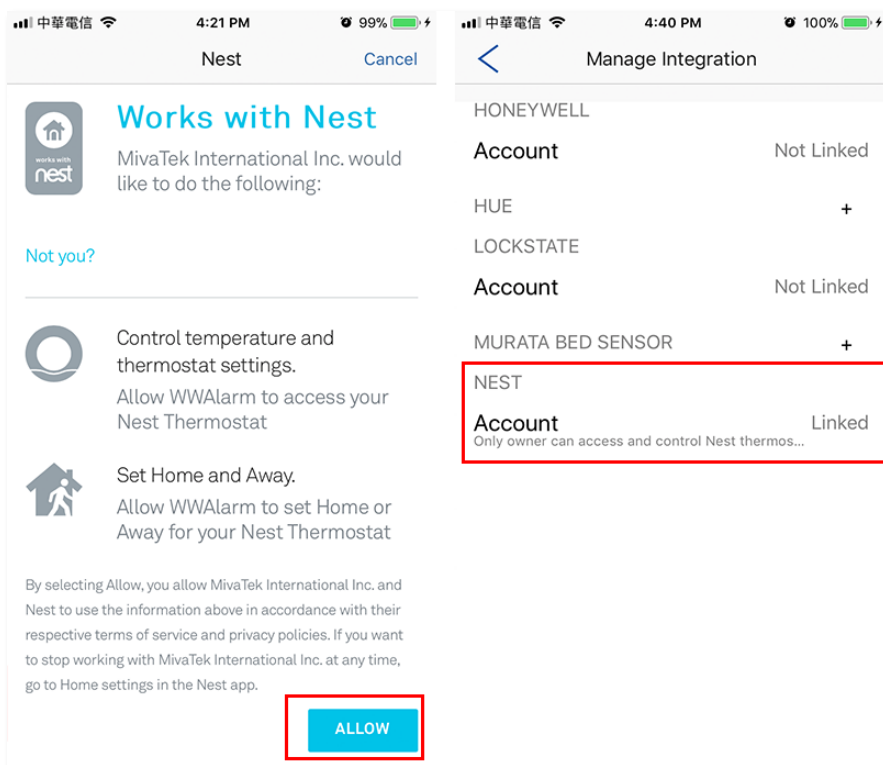

3. View thermostat on WWAlarm.

On WWAlarm page, tap on "Energy". Select a thermostat to view and control remotely from Home8.

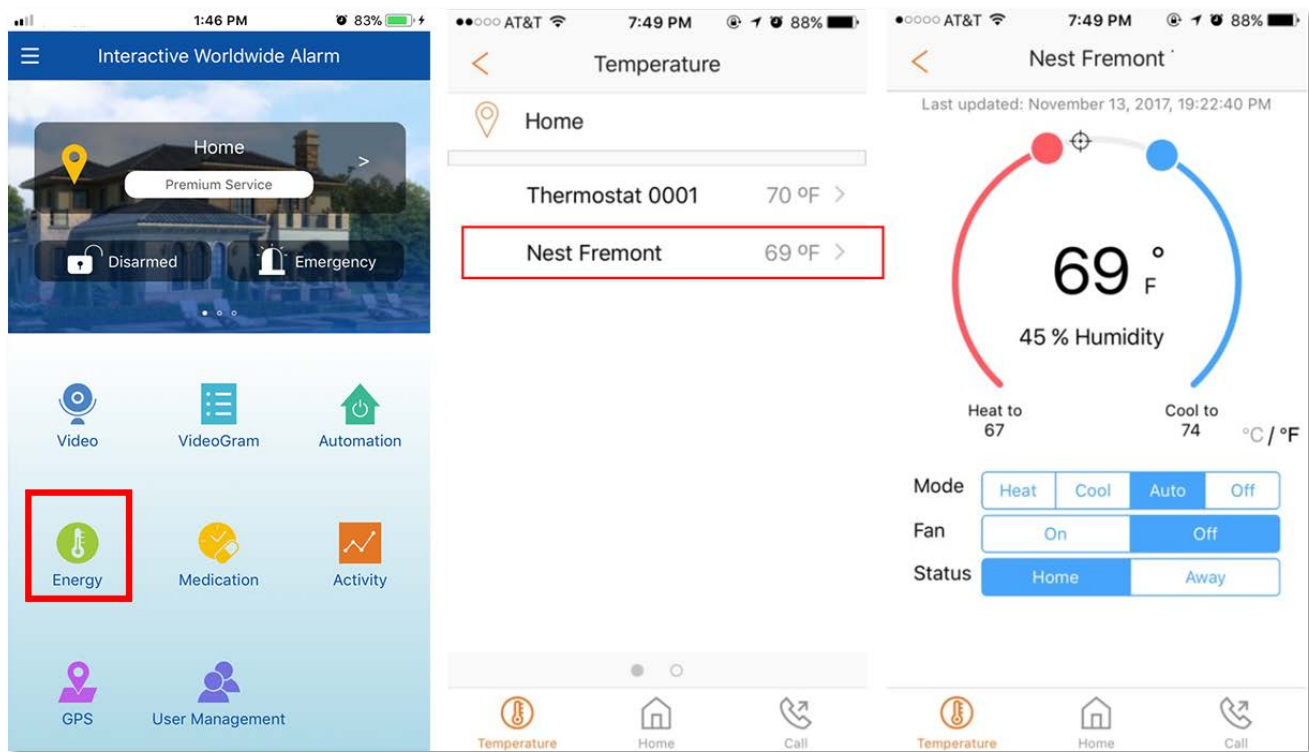

*Note: Only account owner will have viewing and control permission to the Nest thermostat on Home8. This is the restriction set forth by the Nest application.